


## FL-20 Focusable Fresnel Lens


### ■ Product Show

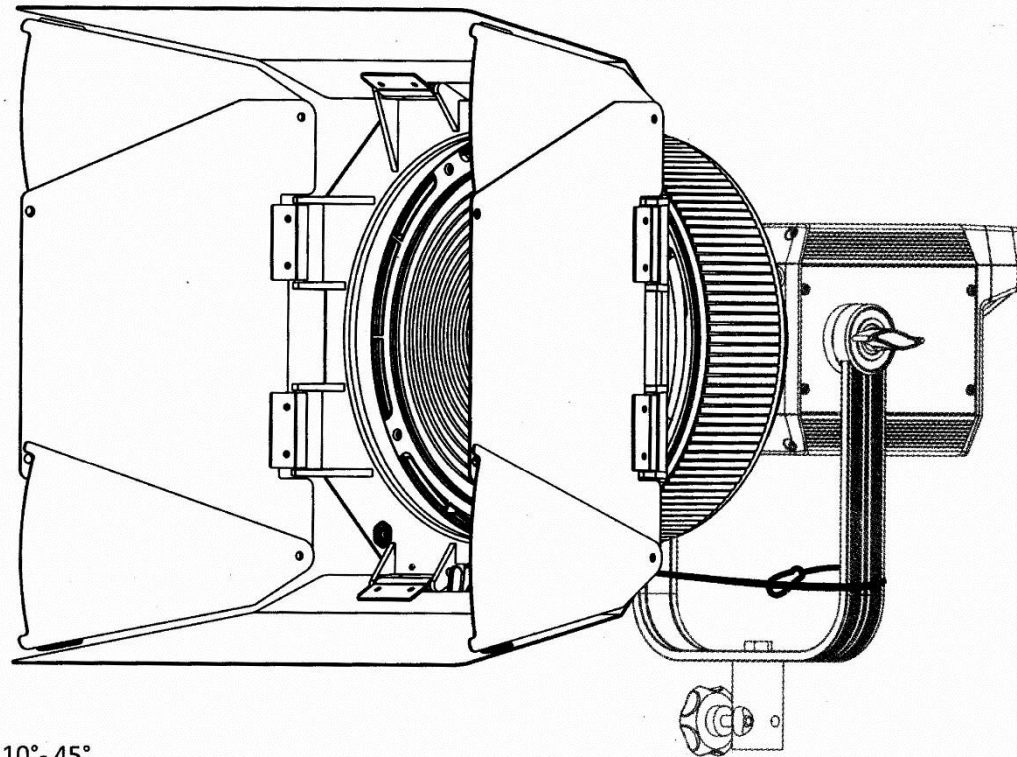


Spot-to-flood Range of 10° - 45°

## Nanlite FL-20 Focusable Fresnel Lens


### ■ Usage

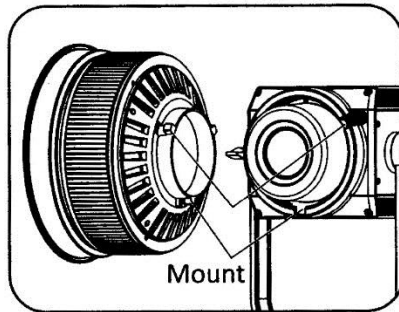


When installing the Fresnel lens, make sure its mount points line up the slots on the light fixture. When the mount points and slot are lined up push the Fresnel lens in place rotate the lens in the locking direction as described on the light.

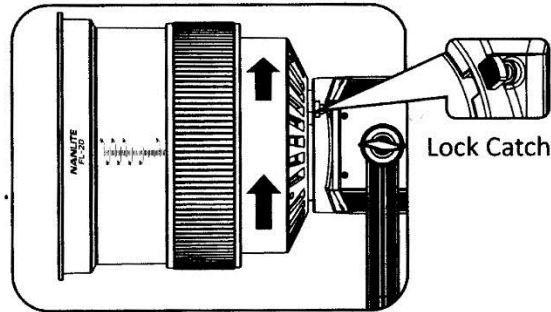


When removing the Fresnel lens, push and hold on the lock catch while rotating the lens and you are able to remove it from fixture.

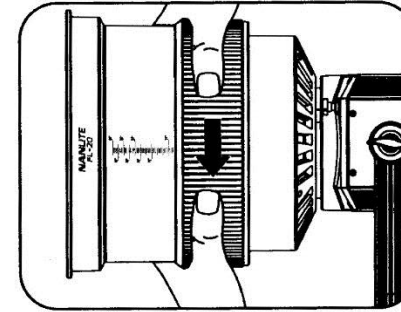


When adjusting the spot light, as shown in the figure, to adjust the beam angle of light, turn the dial on the lens with two fingers, like adjusting zoom on a camera lens to get the focused effect.

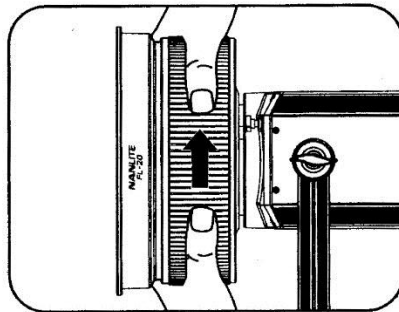

When adjusting the flood light, as shown in the figure, to adjust the beam angle of light, turn the dial on the lens with two fingers, like adjusting zoom on a camera lens to get the flood effect.

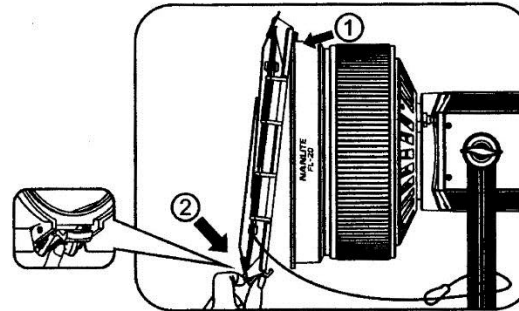

When installing the barn door, make sure the mount points of barn door ① and barn door ② connect properly in place on to this rim of the Fresnel, then connect the safety strap to the light stand. (As described on the light.)

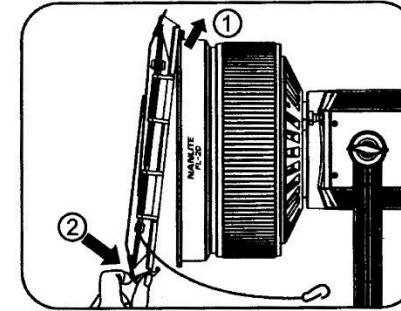

Remove the safety strap in advance, push the the mount of barn door ② while pulling upward the mount of barn door ① and remove the barndoor.